

Mounting instruction

ECOFLEX® 10

UHF-Connector / Art. Nr.: 7377




Cut off cable tail right-angled.




Remove 26 mm of the outer sheath with a knife.



Shorten the copper braid to 10 mm.

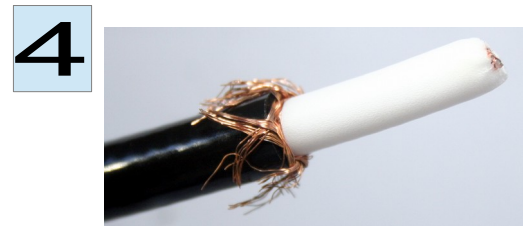

Bend copper braid backwards, Scarify and remove copper foil with a knife.

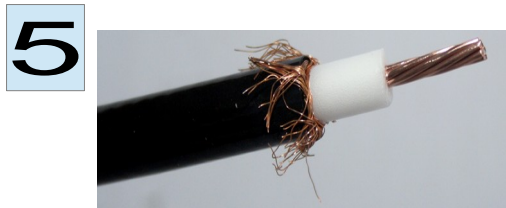

Remove 16 mm from the dielectric



Move connector sleeve over the cable. Screw housing onto the cable.



Solder the inner conductor carefully through the front hole..



Crew connector sleeve over the housing..